ARAT Navigation mount

Car Manufacturer: VOLKSWAGEN

TYPE: T4 VAN, 96 onwards

Part No: NS1234

ARAT GmbH
Spezialhalterungen
für Autotelefone u. -Navigationssysteme

...the world of communication

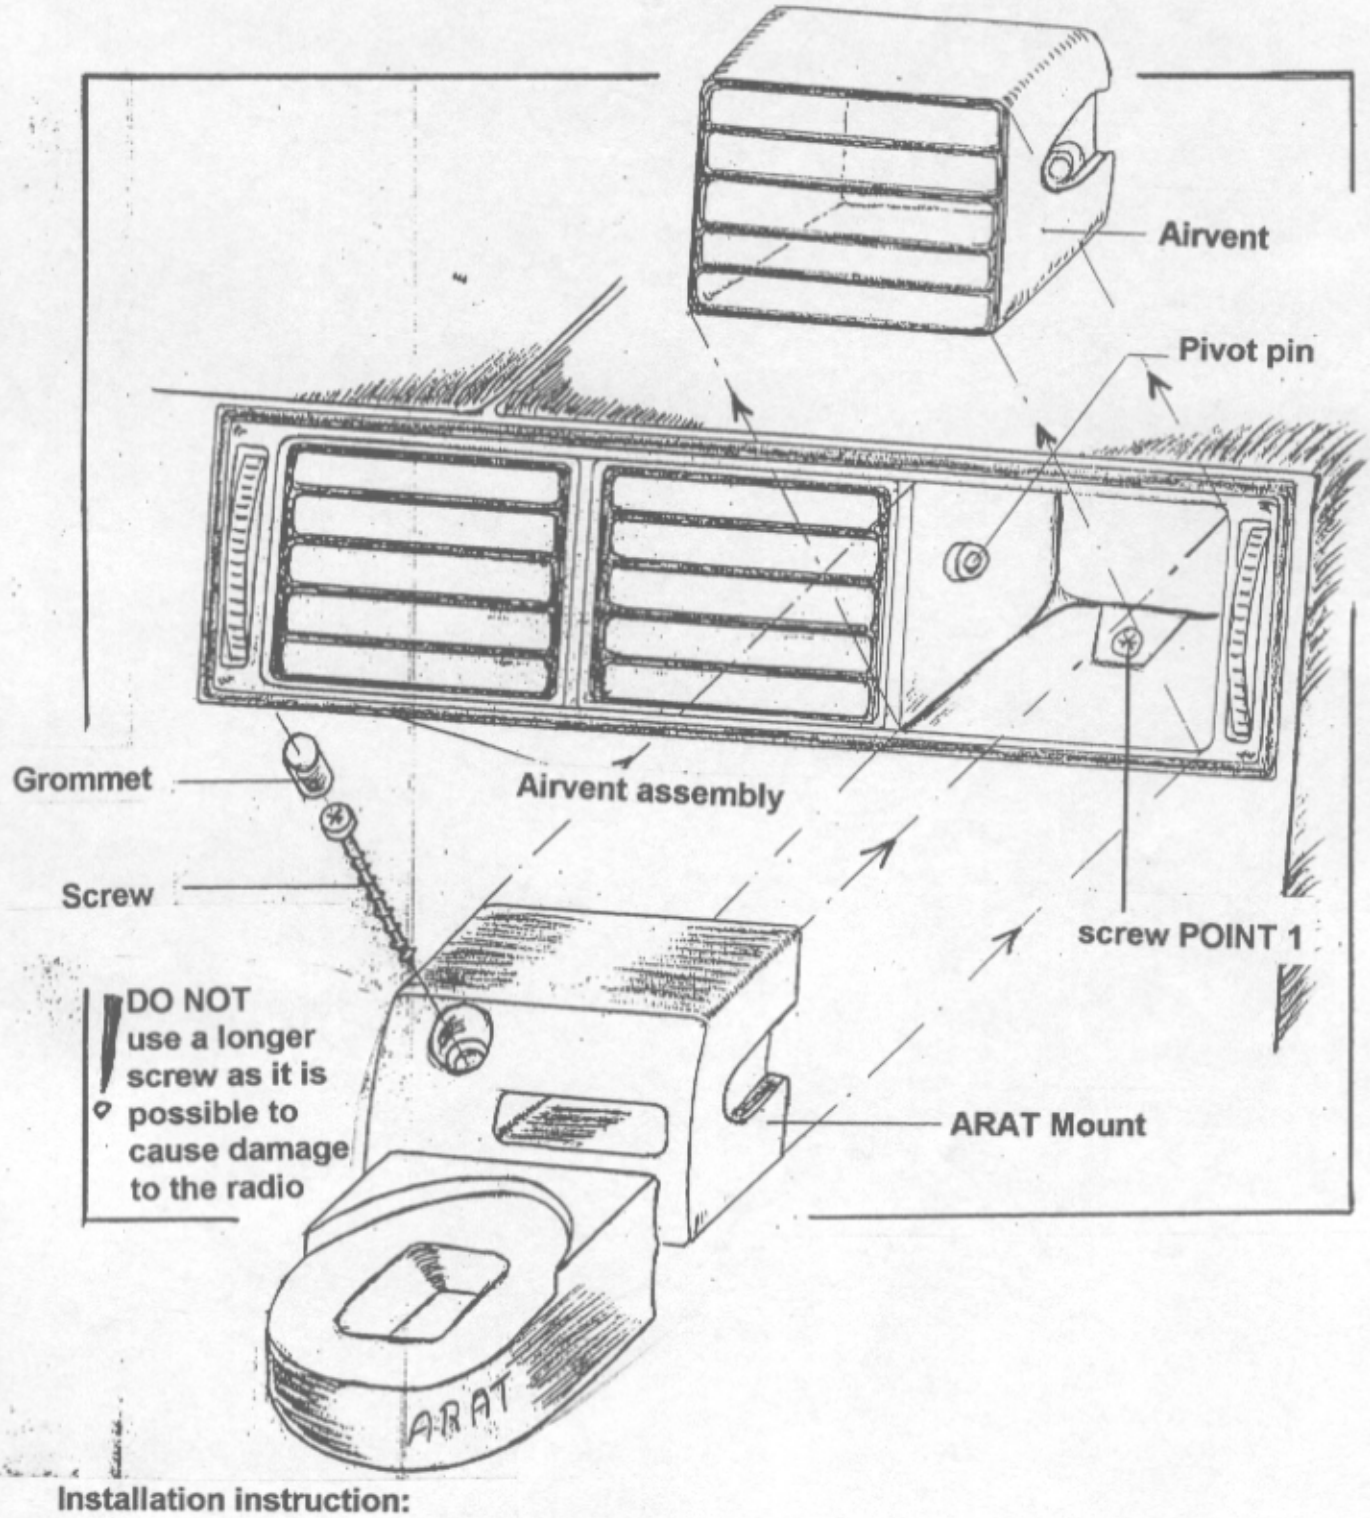

Installation instruction:

1. Remove the airvent from its housing, by prizing it out on both sides
2. Remove the screw at POINT 1, and place the ARAT mount into this reccess
3. Secure the mount with the siupplied screw 4.8 X 32 into the hole which the screw at POINT 1 has been removed, insert the grommet
4. Use the cable channel for the monitor cabling.